

OPENING the Lodge

(Revised May 2021)

**Always feel comfortable to call Pamela Woodman for instructions or guidance
Mobile – 0488 159 888 – at any hour**

ELECTRICITY

All switches are INSIDE the Lodge - do NOT touch the switchbox on the outside wall.
Switchboard is on the Bedroom level, opposite Bedroom 4, behind a grey metal door.
There are three banks (groups) of Circuit Breakers.
They are ON when the lever points to the CENTER of the cabinet.
Turn on ALL (or according to your requirements) – switches are labelled.

HEATING & HOT WATER

Heating and Hot water come on when electricity is turned on.
You no longer need to touch the heating controls in the “Men’s Shed”.
(i.e. where the hot water tanks are located)

Hot Water

Hot Water should flow in about 30 minutes.

Heaters – (Radiators) - Common Areas & Rooms

Please use your COMMON SENSE to conserve energy.

WINTER

ALL heaters are left ON during the extended Winter period.
It takes about four days before all areas of the Lodge are comfortably warm.
Thermostat setting for individual room heaters is best set about “1.5”.
Underfloor heating thermostats – suggested setting 20°C
Only turn off during Winter if instructed by Pam Woodman.

SUMMER

Ensure areas and rooms that DO NOT REQUIRE HEAT are OFF.

WATER

Nothing to do. The water is already on.

OUTDOOR FURNITURE

This is left on the verandah - we have dispensed with chaining it together.

BARBEQUE

This is left on the verandah – WARNING – Cover MUST be tied on or removed inside.

UMBRELLA

Stored under bench seat near sound system.

Put this card away in Lodge Captain’s Cupboard

